



| PDF-800DB

# 8" DIGITAL PICTURE FRAME

Distressed Black Wood Frame

## USER MANUAL



NEED HELP?



Call our help line  
1-855-544-4841



or visit us at:  
[www.polaroid.com](http://www.polaroid.com)

Polaroid, Polaroid & Pixel, Polaroid Classic Border Logo, and Polaroid Color Spectrum are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

© 2019 All Rights Reserved

Made In China

Distributed by: PA Brands, Minneapolis, MN 55340

 
## Table of contents

Important Safety Precautions.....	3
Safety Instruction .....	3
Cleaning and Care Instructions.....	4
Product Features.....	5
Package Contents .....	5
Rear Panel View .....	6
Getting Started .....	7
Display Source .....	8
Main Menu.....	9
Browser.....	9
Photo .....	10
Calendar.....	11
Setting.....	11
Troubleshooting .....	14
Specifications .....	14
Warranty.....	15

## Important Safety Precautions

Congratulations on purchasing your new digital photo frame. With this Digital Photo Frame, you can easily and quickly view photos directly from your digital camera's memory card. You can even create a slideshow with multiple transition effects. The Digital Photo Frame is compatible with Secure Digital (SD) cards (including SDHC and SDXC cards up to 32 GB), Multi Media Cards (MMC), and USB flash drives.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

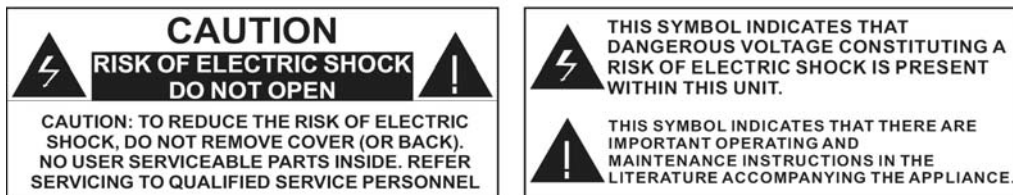

- High voltage inside. Do not open the casing of the digital photo frame. Refer servicing to qualified personnel only.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- To avoid data loss, do not insert or remove memory cards or USB device when the power is on.

## Safety Instructions

- Do not expose the product to dripping or splashing liquids or objects filled with liquids, such as vases. **Use in a dry location only.**
- Keep product away from open flames, such as candles.
- Keep the digital photo frame clean and never store it near a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Press the buttons gently. Pressing them or the screen too hard can damage the digital photo frame.
- Do not use the product in an extremely dry environment as this can lead to static discharge, which can damage the digital photo frame.
- Do not subject the product to harsh impacts. Do not drop the product. These may result in damage to the product and loss of data.
- Do not attempt to repair or disassemble the unit yourself. Only qualified service personnel should perform repairs.
- The digital photo frame is for **indoor use only.**
- Use only the DC 5V power adapter supplied with this product. Do not unplug the adapter while viewing the pictures.

- Do not block the ventilation holes on the back of the digital photo frame.
- Children should be supervised to ensure that they do not play with the product.
- To prevent overheating and damage to the screen, unplug the product when you do not intend to use it for a long period of time.
- Insert the plug into the DC IN jack completely on the unit before connecting the AC adapter to an electrical outlet.
- This product can only display files with compatible formats.
- Do not use the product in temperatures over 105° F (40° C).
- Do not allow metallic objects to touch the DC plug when the player is on.

## **Care and Maintenance**

- Always turn off the unit and remove the power adaptor from the electrical outlet before cleaning the unit.
- Use a soft dry cloth to clean this product.
- Never spray or pour liquids directly onto the screen or casing.
- Do not use abrasive materials or chemical cleaners such as alcohol, benzene, etc. Do not allow any water or other liquid to enter the device.
- Do not drop the device; it contains sensitive electronics and cannot withstand shock from falls.
- Do not hit or scratch the screen. Handle it with care. The LED panel of the photo frame is made of glass and therefore is sensitive to excessive force and contact with sharp objects.


## Product Features

- 7.9 inch IPS digital high resolution display
- Compatible with most JPEG/BMP/GIF/TIF/PNG images
- Automatic slide show with multiple transition effects and display intervals
- Picture enhancements including photo rotation
- Compatible with SD/SDHC/SDXC/MMC memory cards up to 32GB; USB slot for most USB devices up to 128GB
- Wall mount hole on the rear of the digital photo frame

## Package Contents


Make sure that the items shown below are included in the package. If an item is missing, contact the retailer where you purchased this product.

1. Digital Photo Frame
2. Power Adapter
3. Instruction Manual
4. Stand

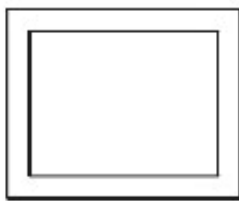



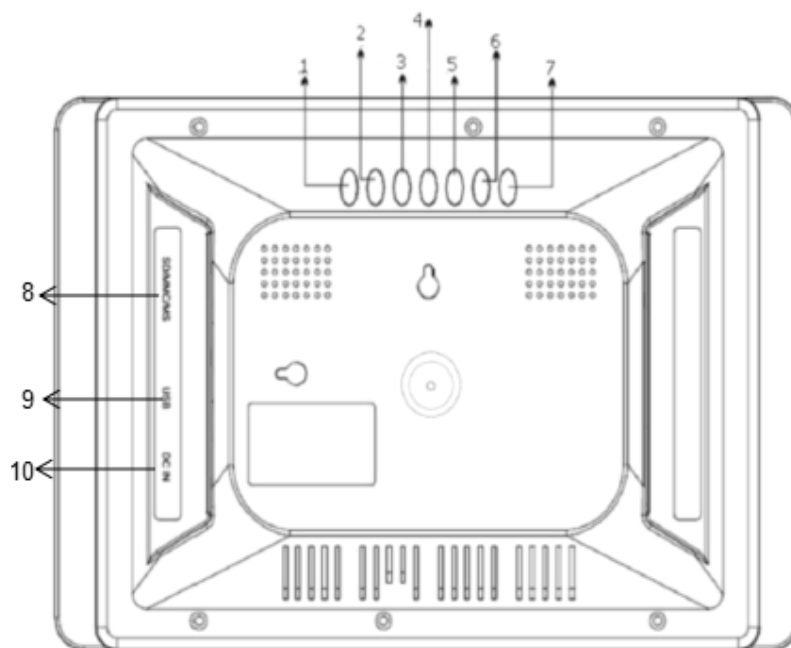


\*Required but not included: SD Card / USB Stick

## Rear Panel View



## Parts and Controls

1	Play/Pause Button  : Press to select an option from the on-screen menu. In slideshow mode, press to pause/resume a slideshow.
2	Power/Menu Button: Press to access the on-screen menu. Press and hold to shut photo frame off and turn frame back on.
3	Exit Button: Press to exit the current menu and display the previous menu
4	Right Arrow Button  : Press to navigate down through on-screen menu options and thumbnail images
5	Left Arrow Button  : Press to navigate left through on-screen menu options and thumbnail images
6	Down Arrow Button  : Press to navigate up through on-screen menu options and thumbnail images
7	Up Arrow Button  : Press to navigate up through on-screen menu options and thumbnail images
8	Card reader slot for inserting SD/MMC cards
9	USB port for inserting most USB devices
10	DC IN Jack for connecting included AC Adapter

## Getting Started

1. Attach the stand to the rear of the Digital Photo Frame in either the horizontal or vertical position; orient it so that the frame sits at the desired angle. To wall mount the Digital Photo Frame instead, see the section below on wall mounting.
2. Insert your memory card or your USB flash drive.
3. Connect the power adapter to the photo frame and plug it into an electrical outlet.



## Wall Mounting

1. Insert a nail, screw, or hook into the wall in a location that will support the frame's weight.
2. Leave at least ½" (about 12mm) of the nail or screw exposed.
3. Hang the Digital Photo Frame onto the nail or screw.




## Connecting a USB Flash Drive

To view photos from a USB flash drive, insert it into the USB port on the side of the frame.

### NOTE:

- Not all USB storage devices are compatible with this digital photo frame.
- USB drive must be formatted using the FAT32 file system. Drives formatted as NTFS or exFAT will not be recognized.

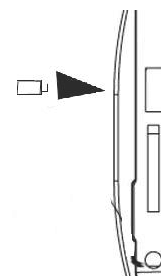


## Inserting a Memory Card

To view the pictures from a memory card, insert it into the slot marked "SD/MMC CARD" on the side of the Digital Photo Frame with the metal contacts of the card facing toward the LCD Display.

### NOTE:


- Do not force the memory card into the slot. If you are not able to insert the memory card easily, you may have inserted it incorrectly; turn the card over and try again.
- Do not remove a memory card immediately after inserting it or when the frame is processing files. Wait until the screen is stable.
- Maximum SD/MMC card size is 32GB and USB flash drive size is 128GB.

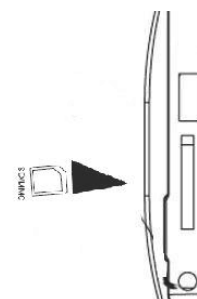

## Connecting the Power Supply

1. Place the frame on a flat, stable surface.
2. Plug the DC plug of the adapter to the jack marked "DC IN 5V" on the side of the digital photo frame, and then connect power adapter to a standard 110-Volt AC electrical outlet. The player will power on.
3. Press and hold the Power/Menu Button to power the frame on or off.
4. When the unit is not being used for a long time, press the Power/Menu Button on the unit to power it off and unplug the AC adapter from the electrical outlet.

## Display Source

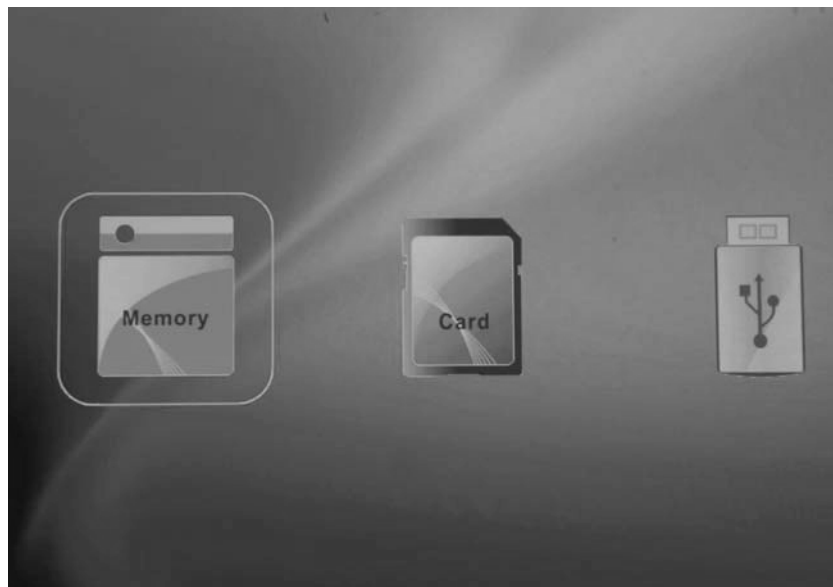


If the frame is off, press and hold the Power/Menu Button to power on the frame. After the card/drive is read, a slide show will start. Press the Exit Button to stop the slide show and enter File Browser mode. Press the Exit Button again to access the main menu. Press the Exit Button a third time to enter Source Mode, in which you can select a photo source from the memory devices inserted into the frame-- memory card, USB flash drive, or the frame's internal memory. Press the Play/Pause button to return to the main menu.

**NOTE:** Large capacity memory cards and USB drives may take extra time to load.

When in Source Mode, press the left and right Arrow Buttons to choose an input source: Internal Memory, Memory Card or USB Flash Drive. Press the Button to confirm and return to the Main Menu



## Main Menu

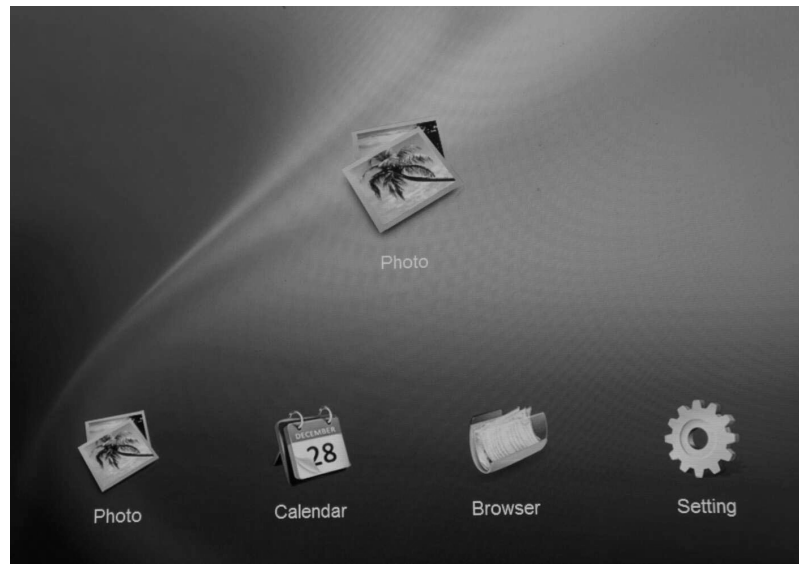

Press the left and right Arrow Buttons to select Photo, Calendar, Browser, or Setting. Press the play/pause button to confirm. See below for descriptions of each of these modes

## Browser



Displays a list of photos on the left with a thumbnail of the selected image on the right. Press the up and down Arrow Buttons to select a photo.

### **Copy to Internal Memory**

To copy the selected image to the frame's internal memory, press the Right Arrow Button to access the on-screen menu. Use the Up and Down Arrow Buttons to select "Copy" and then press the Play/Pause Button to bring up the Confirm Copy window. Press the Right or Left Arrow Buttons to highlight "Yes" or "No" and then press the Play/Pause Button to confirm.

### **Delete Photo**

To delete the selected image, press the Right Arrow Button to access the on-screen menu. Use the Up and Down Arrow Buttons to select "Delete" and then press the Play/Pause Button to bring up the Confirm Delete window. Press the Right or Left Arrow Buttons to highlight "Yes" or "No" and then press the Play/Pause Button to confirm.

### **Slideshow**

Press the Play/Pause Button again to start a slideshow with the selected image. Press the Exit Button to return to the browser screen.

### **Photo**

From the main menu, press the Left and Right Arrow Buttons to select "Photo" and then press the Play/Pause Button to display a thumbnail image gallery. Press the Up, Down, Right, and Left Arrow Buttons to select an image and then press the Play/Pause Button to begin a slide show with that image. To pause, press the Play/Pause Button again. Press the Exit Button to return to the thumbnail gallery screen.

### **Working with Photos**

During a slideshow, press the Menu Button to display the on-screen menu.



Options available for manipulating the selected photo are Slideshow Interval, Delete, Information, and Gamma Correction. See below for descriptions of each of these functions. Press the Exit Button to resume the slide show.

To rotate a photo, simply press the Up or Down Arrow Buttons when the image you want to rotate appears during a slide show and then press the Play/Pause Button to continue to slide show. Each press of the Up or Down Arrow Button will rotate the photo 90°.

**Slideshow Interval** - Select an image display duration of 3 seconds, 5 seconds, 15 seconds, 30 seconds, 1 minute, 5 minutes, 15 minutes, 30 minutes, or 1 hour

**Delete** - Deletes the selected image

**Information** - File name, Resolution, File Size, Created Date

**Gamma Correction** - Changes gamma values of images, which is similar to brightness but affects an image in a nonlinear manner. Choices are Channel (RGB, Red, Green, Blue), GrayScale (-100 to +100), Brightness (-100 to +100), Contrast (-100 to +100)

 
## Calendar

From the main menu, press the Left and Right Arrow Buttons to select "Calendar" and then press the Play/Pause Button to enter Calendar mode. In this mode, your photos will display as a small slide show on the left along with the time display, while a monthly calendar displays on the right. Press the Up and Down Arrow Buttons to change the year and press the Left and Right Arrow Buttons to adjust the date. Press the Exit button to exit Calendar mode and return to the main menu.



## Setup

From the main menu, press the Menu Button to display the setup menu. Press the Up and Down Arrow Buttons to select Photo Setup, Calendar Setup, or System Setup and press the Play/Pause Button to confirm. Use the Left and Right Arrow Buttons to change a highlighted setting. To return to the setup menu, press the Exit Button.

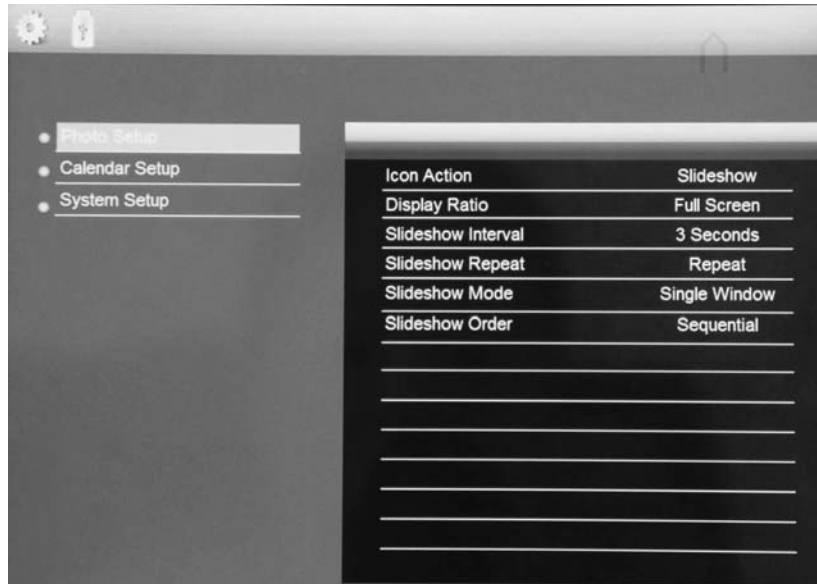

## Photo Setup

**Icon Action** - Choices are "Thumbnail" (displays thumbnail gallery after selecting "Photo" from main menu) or "Slideshow" (begins a slide show after selecting "Photo" from main menu)

**Display Ratio** - Choices are "Auto Fit," "Optimal," or "Full Screen." Most images display best using the "Auto Fit" option

**Slide Show Interval** - Selects an image display duration from three seconds to one hour

**Slideshow Repeat** - Choices are "Repeat" (restarts a slideshow after the last image is displayed) or "No Repeat" (returns to main menu after all images have been displayed)

**Slideshow Mode** - Choices are "Single Window" (one image fills the screen), "Two Windows" (two images display simultaneously side by side), "Three Windows" (three images display simultaneously), or "Four Windows" (four images display simultaneously)

**Slideshow Order** - Choices are "Sequential" (images display in order) or "Random" (images display in random order)

## Calendar Setup

Set Date - Sets the date, month, and year

Set Time - Sets the time of day

Set Time Format - 12-hour or 24-hour time display

## **System Setup**

**Language** - Press the Left and Right Arrow Buttons to choose English/French/German/Italian/Spanish/Portuguese/Swedish/Dutch language for menus.

**Gamma** - Select a gamma correction value from 1 - 100

**Brightness** - Changes the screen brightness value from 1 - 100

**Contrast** - Changes the screen contrast value from 1 - 100

**Auto Power Off** - Accesses an on-screen menu where you can select a time of day for the photo frame to power off. Use the Up, Down, Left, and Right Arrow Buttons to set.

**Auto Power On** - Accesses an on-screen menu where you can select a time of day for the photo frame to power on. Use the Up, Down, Left, and Right Arrow Buttons to set.

**Auto Power Frequency** - Selects when to activate the Auto Power settings. Choices are Weekend, Weekdays, Daily, and Once.

**Start Up Mode** - Choose whether to automatically begin a slide show when the frame powers on. Choices are Photos (slide show begins automatically) and Off (main menu will display when powered on).

**Version** - Displays firmware revision number

**Reset Settings** - Select to bring up an on-screen menu where Yes and No will appear; select Yes and then the Play/Pause Button to return all settings to their factory defaults.

## Troubleshooting

Problem	Cause/Solution
No power	The power connector is not completely inserted into the DC IN Jack.
Screen freezes	The unit may have malfunctioned. Shut it off and wait a few minutes before turning it on again.
Characters in display are incorrect	Make sure that you have selected the correct language.
Unable to insert memory card or USB device	Memory card or USB device is not inserted correctly; turn card over and reinsert.
The unit cannot recognize the memory device inserted	<ol style="list-style-type: none"> <li>1. Memory card or USB device is not inserted correctly.</li> <li>2. The memory device may be damaged. Try a different card/device.</li> <li>3. Make sure that you are using a memory card type that is compatible (SD/MMC).</li> <li>4. Large capacity memory devices take longer to read; wait for a moment.</li> <li>5. USB drive is formatted with an incompatible file system. Make sure drive is formatted as FAT32.</li> </ol> <p><b>NOTE:</b> Not all USB devices or memory cards are recognized by this digital photo frame.</p>
Some images display properly, while others do not	Make sure all images are in a compatible format (.JPG, .JPEG, .BMP, .TIF, .PNG)

## Specifications

Display	8" IPS Digital High Resolution Screen aspect ratio: 4:3 Display Resolution: 1024 x 768 pixels
Power adapter	Input: 100~240VAC, 50/60Hz Output: 5VDC 1500mA
USB slot	USB 2.0 slot supports most USB flash drives
Supported memory cards	SD, SDHC, SDXC, and MMC - maximum 32 GB card
Supported file formats	JPEG, BMP, TIF, GIF, PNG
Operating temperature	40° - 95° F (5° - 35° C)
File Size Limit	64MB (8000 x 8000 pixels)

**NOTE:** As a result of continual improvements, the design and specifications of this product may differ slightly from the unit illustrated on the packaging and are subject to change without notice.

**NOTE:** As a result of continual improvements, the design and specifications of this product within may differ slightly to the unit illustrated on the packaging and are subject to change without notice.

**UNITED STATES LIMITED WARRANTY TO ORIGINAL CONSUMER**

This Product (including any accessories included in the original packaging) as supplied is warranted by PA Brands to the original consumer purchaser against defects in material and workmanship ("Warranty") as follows:

<u>Product Type</u>	<u>Parts Warranty</u>	<u>Labor Warranty</u>
Digital Picture Frames	90 Days	90 Days

**To obtain Warranty Service and Troubleshooting information:** Visit our website at [www.polaroid.com](http://www.polaroid.com) or contact the Consumer Care Center at 1-855-544-4841

To receive Warranty service, the original consumer purchaser must contact PA Brands for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice from PA Brands or its authorized resellers, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to PA Brands, in order to obtain the requested service.

**Exclusions and Limitations**

Shipping expenses to the PA Brands service center are not covered by this warranty. This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, noncommercial use of the Product, and does not cover consumer instruction, delivery, installation, set-up, adjustments, cosmetic damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen. This Warranty applies to the original consumer only and does not cover products sold AS IS or WITH ALL FAULTS, or consumables (e.g., fuses, batteries, bulbs etc.), and the Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the United States, and only applies to products purchased and serviced in the United States.

**NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. MANUFACTURER FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON PA BRANDS. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT PA BRANDS' SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. PA BRANDS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST PA BRANDS SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY PA BRANDS. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.**

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. **Outside the 50 United States, this warranty does not apply. Contact your authorized retailer to determine if another warranty applies.**

*This product is manufactured, distributed and sold by PA Brands. Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.*